

3900 Dr. Greaves Rd.

Kansas City, MO 64030


(816) 761-7476

TRIMMING OF FIRE AND COMBINATION FIRE SMOKE DAMPER SLEEVES INSTALLATION INSTRUCTIONS SUPPLEMENT

Trim

٠

Factory supplied sleeves may need to be trimmed in the field to accommodate field conditions. Other damper components such as actuators and fuse links should not be altered.

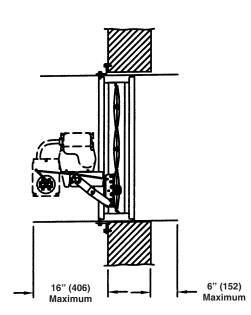


Trim 0 0 Sleeve Length

•

COMBINATION FIRE SMOKE DAMPER

Sleeve Dimensions

- 1. The damper sleeve should not extend more than 6" (152) beyond the rated barrier on the non-actuator or access door side.
- 2. The damper sleeve should not extend more than 16" (406) beyond the rated barrier on the actuator or access door side.

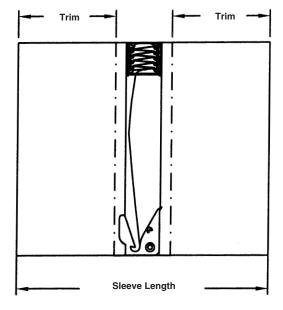

FIRE DAMPER



3900 Dr. Greaves Rd. Kansas City, MO 64030 (816) 761-7476 FAX (816) 765-8955 www.ruskin.com

